


# e one PICTORIAL DIAGRAM

SB1F0\_2

**NOTES:**

- COMPONENTS NOT SHOWN IN ACTUAL LOCATIONS
- WHITE WIRES REPRESENTED AS LIGHT BLUE

PIN	FUNCTION	2000S/XP	EXTREME
1	MANUAL RUN	RED	BROWN
2	L1	BLACK	RED
3	L2	WHITE	BLACK
4	GND	GREEN	GRN/YEL
5	ALARM FEED	ORANGE	YELLOW
6	ALARM RETURN	BLUE	BLUE

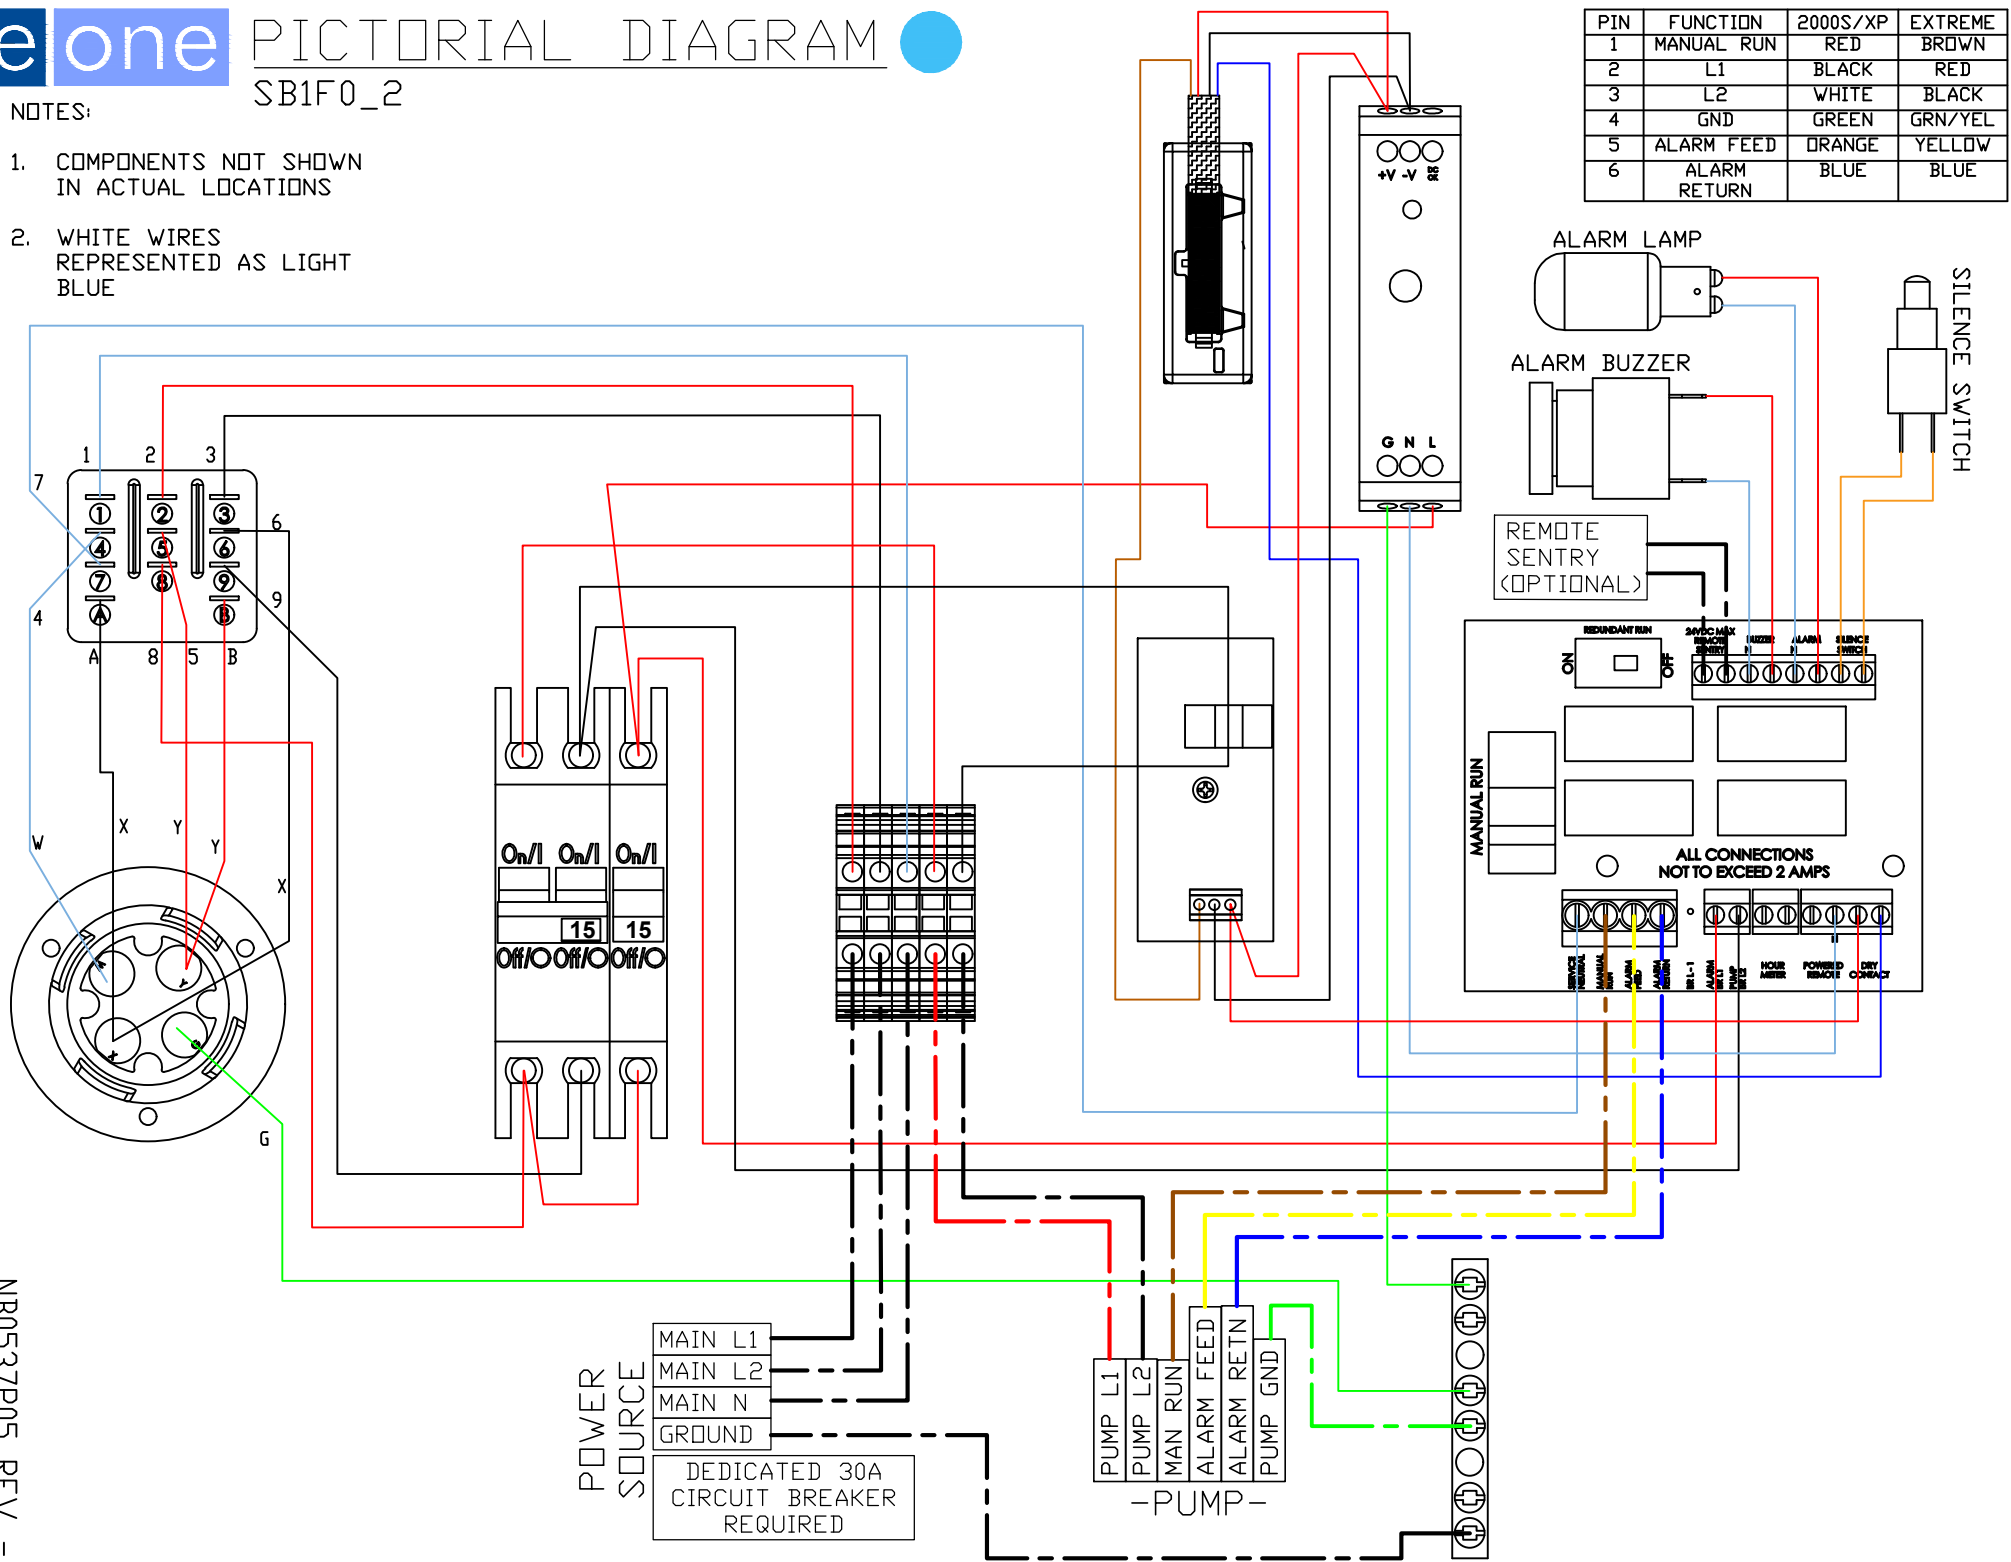

POWER SOURCE  
 MAIN L1  
 MAIN L2  
 MAIN N  
 GROUND  
 DEDICATED 30A CIRCUIT BREAKER REQUIRED

PUMP L1  
 PUMP L2  
 MAN RUN  
 ALARM FEED  
 ALARM RETN  
 PUMP GND

- PUMP -

MANUAL RUN  
 SERVICE  
 MANUAL  
 ALARM  
 ALARM FEED  
 ALARM RETN  
 HOUR METER  
 POWER REMOTE  
 DRY CONTACT

ALL CONNECTIONS NOT TO EXCEED 2 AMPS

ALARM LAMP  
 ALARM BUZZER  
 SILENCE SWITCH

REMOTE SENTRY (OPTIONAL)