


NOTES:

1. COMPONENTS NOT SHOWN IN ACTUAL LOCATIONS
2. WHITE WIRES REPRESENTED AS LIGHT BLUE

PIN	FUNCTION	2000S/XP	EXTREME
1	MANUAL RUN	RED	BROWN
2	L1	BLACK	RED
3	L2	WHITE	BLACK
4	GND	GREEN	GRN/YEL
5	ALARM FEED	ORANGE	YELLOW
6	ALARM RETURN	BLUE	BLUE

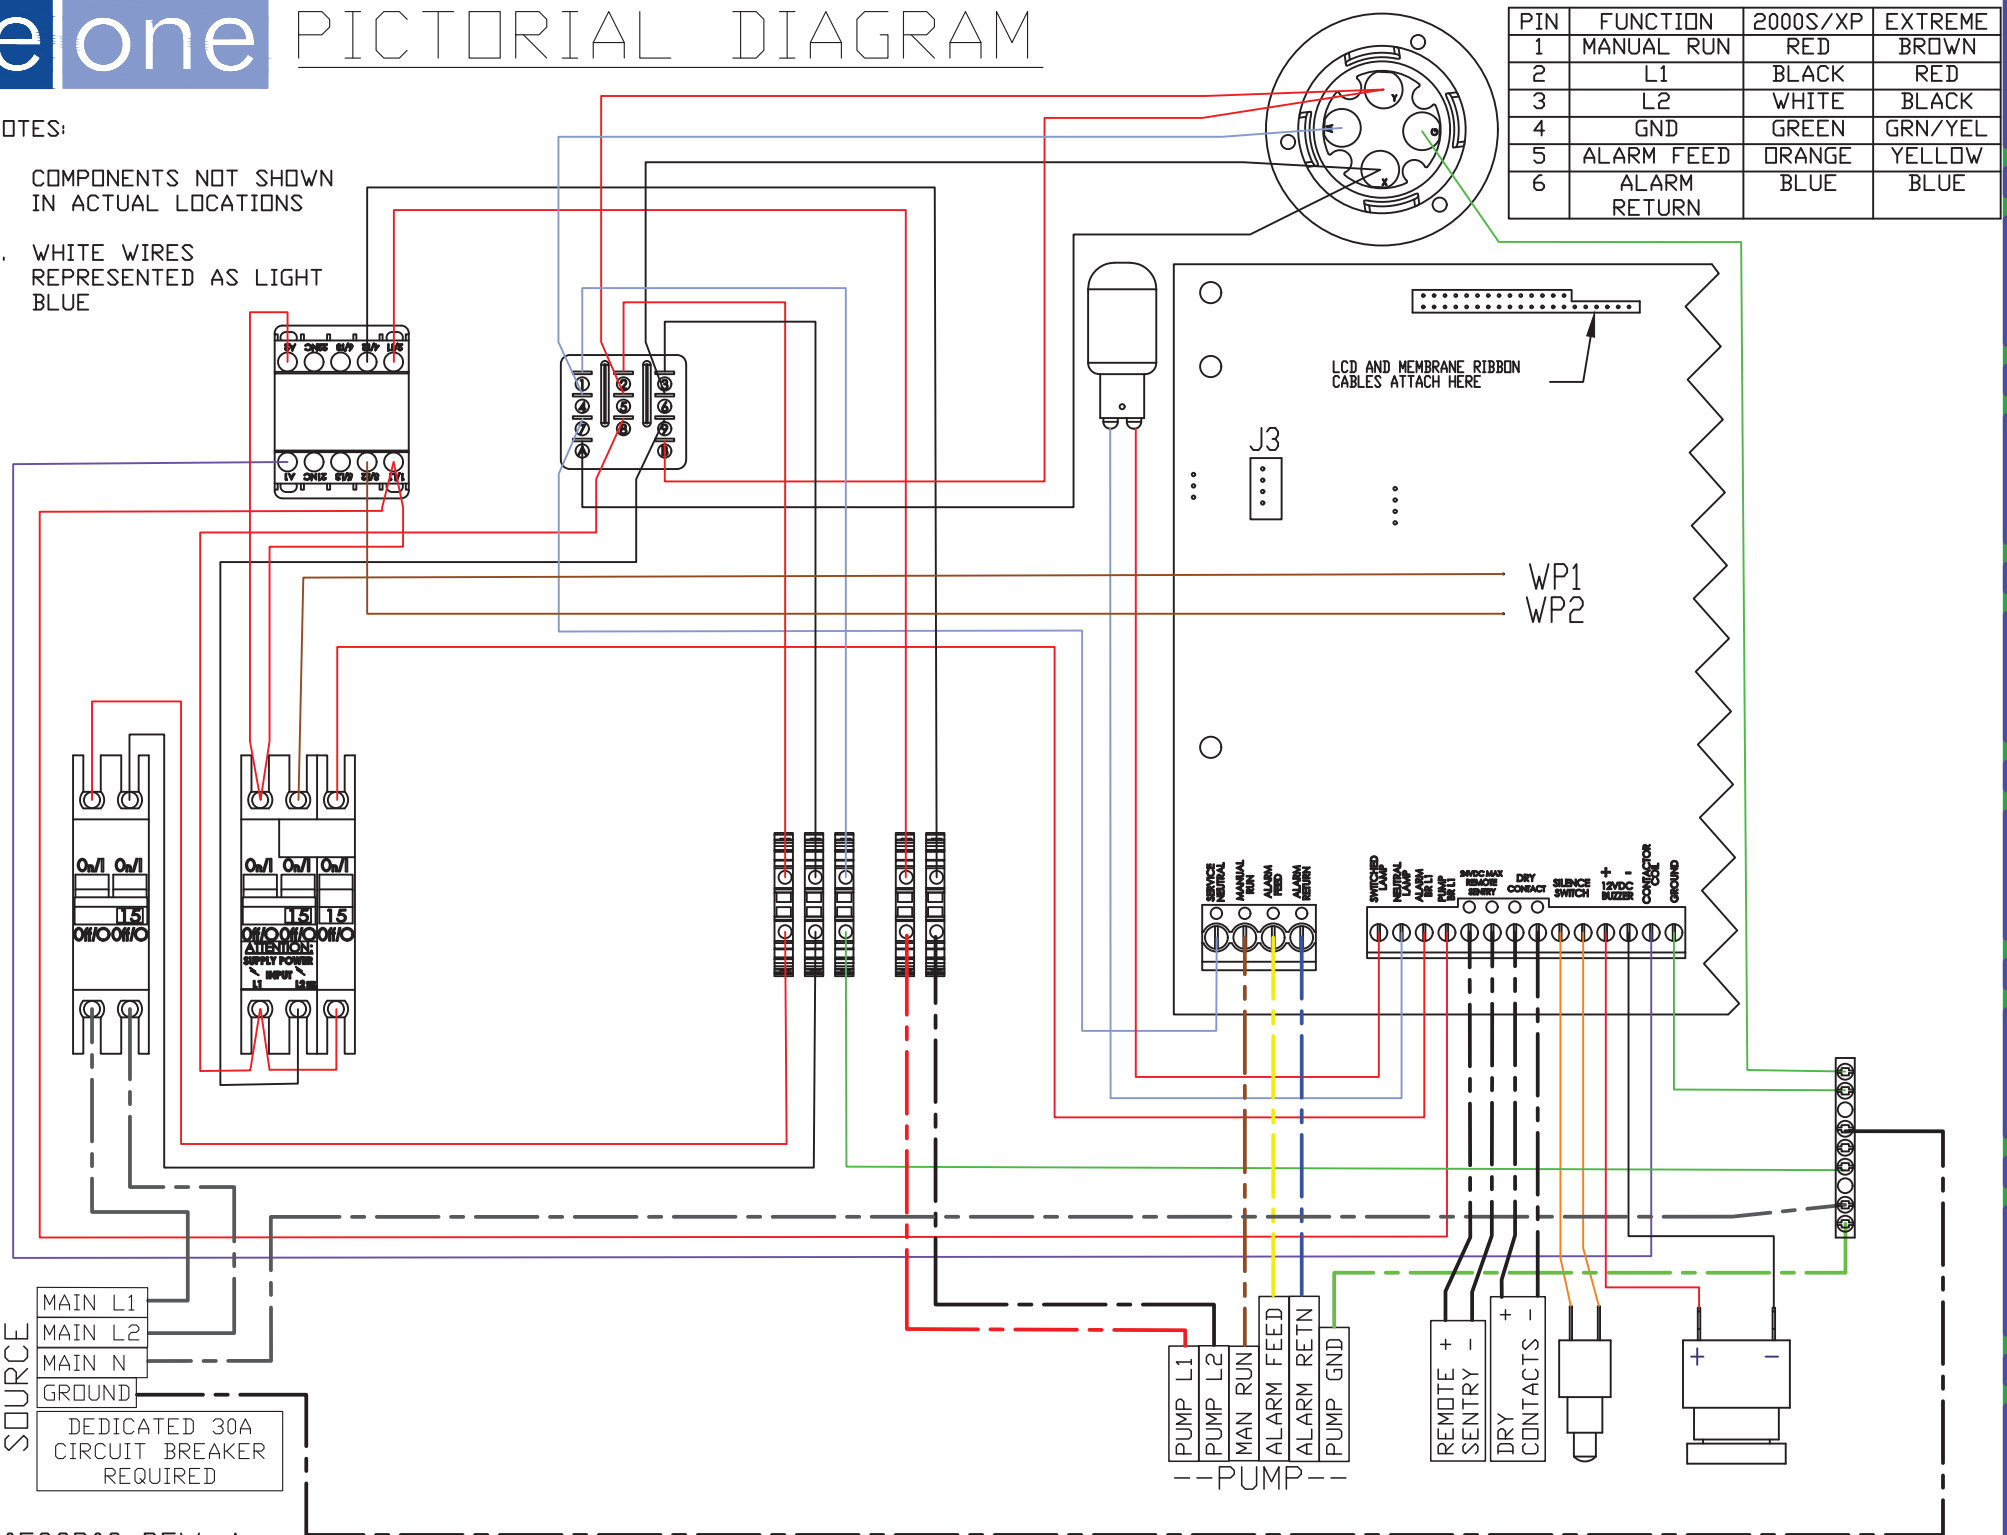

POWER SOURCE

- MAIN L1
- MAIN L2
- MAIN N
- GROUND

DEDICATED 30A CIRCUIT BREAKER REQUIRED

- PUMP L1
- PUMP L2
- MAN RUN
- ALARM FEED
- ALARM RETN
- PUMP GND

- REMOTE +
- SENTRY -
- DRY CONTACTS

