


e one PICTORIAL DIAGRAM

NOTES:

1. COMPONENTS NOT SHOWN IN ACTUAL LOCATIONS
2. WHITE WIRES REPRESENTED AS LIGHT BLUE

PIN	FUNCTION	2000S/XP	EXTREME
1	MANUAL RUN	RED	BROWN
2	L1	BLACK	RED
3	L2	WHITE	BLACK
4	GND	GREEN	GRN/YEL
5	ALARM FEED	ORANGE	YELLOW
6	ALARM RETURN	BLUE	BLUE

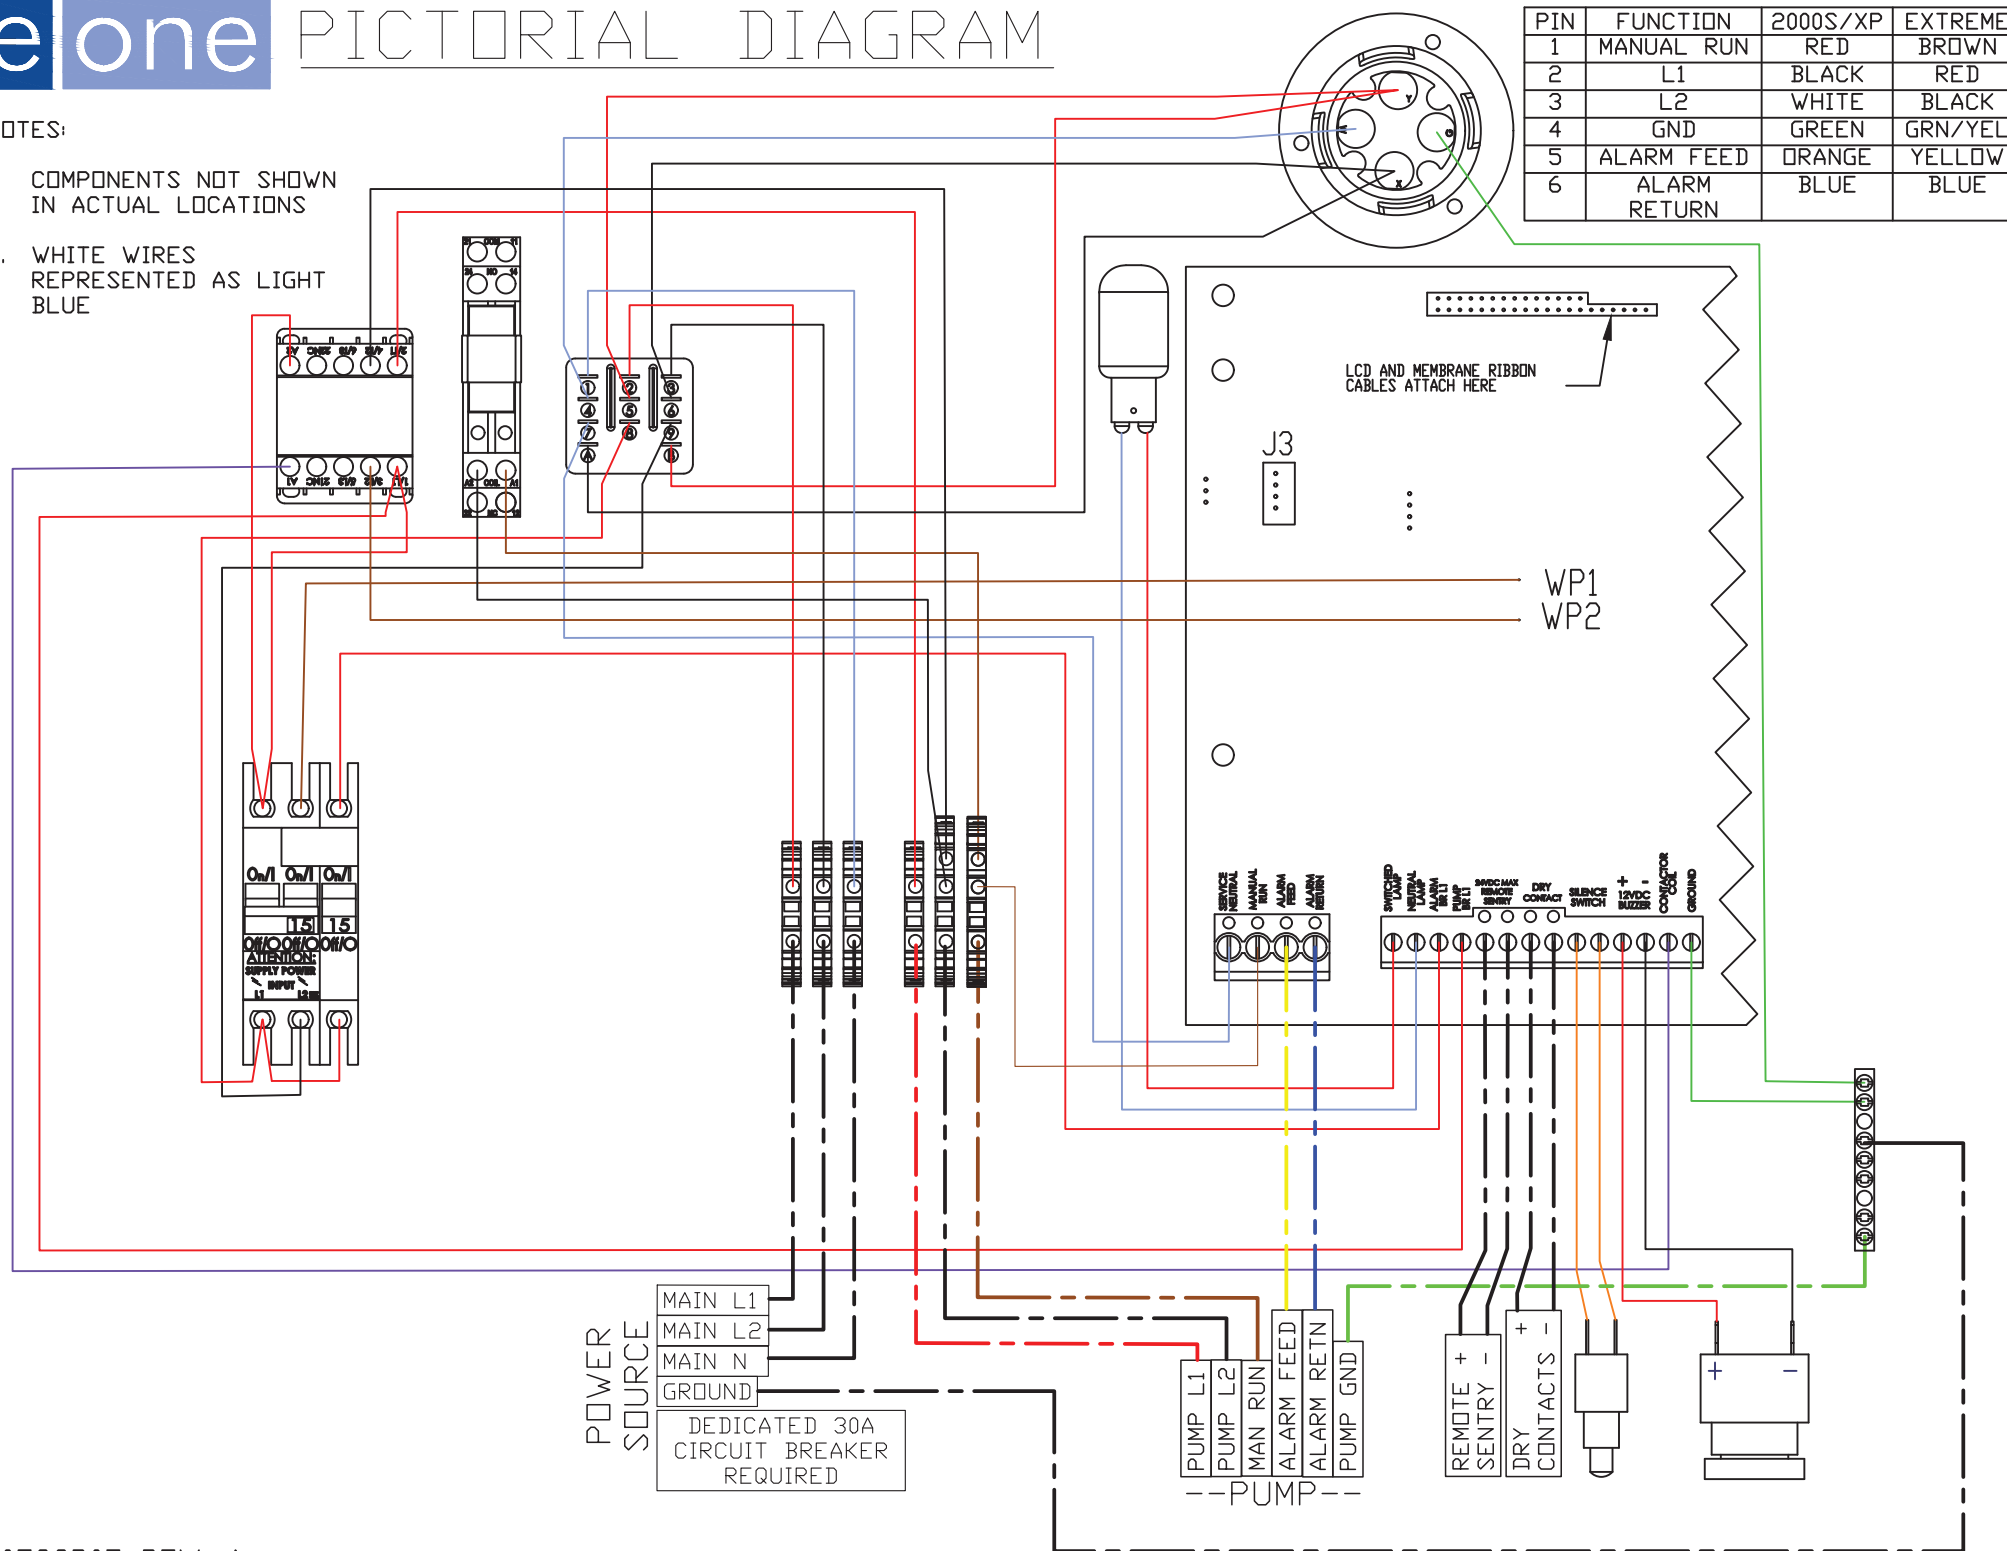

POWER SOURCE
 MAIN L1
 MAIN L2
 MAIN N
 GROUND
 DEDICATED 30A
 CIRCUIT BREAKER
 REQUIRED

PUMP L1
 PUMP L2
 MAN RUN
 ALARM FEED
 ALARM RETN
 PUMP GND
 --PUMP--

REMOTE +
 SENTRY -
 DRY CONTACTS +
 -
 +
 -