


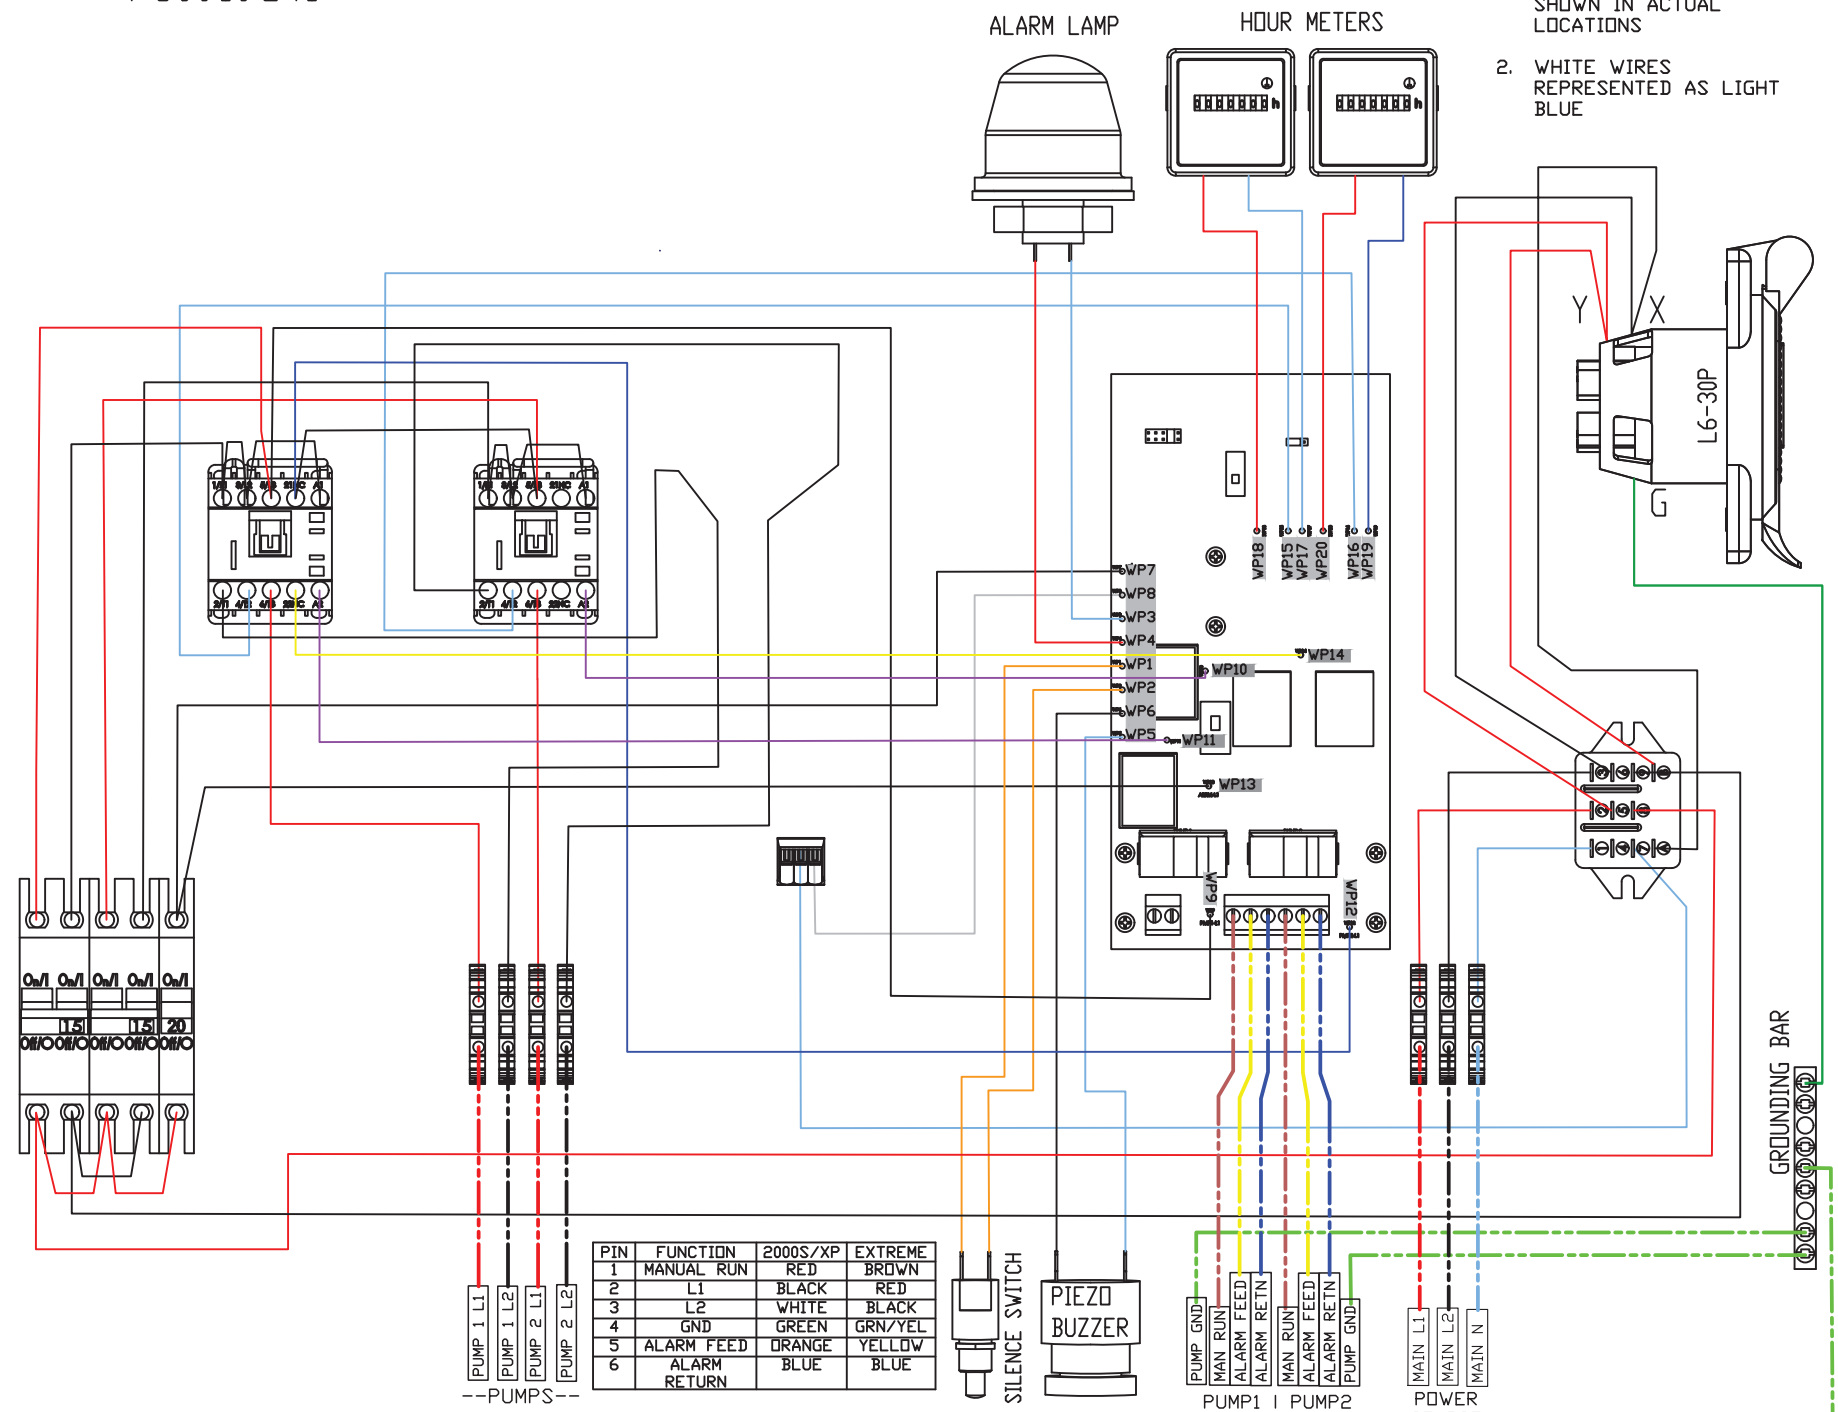

NOTES:

1. COMPONENTS NOT SHOWN IN ACTUAL LOCATIONS
2. WHITE WIRES REPRESENTED AS LIGHT BLUE



PIN	FUNCTION	2000S/XP	EXTREME
1	MANUAL RUN	RED	BROWN
2	L1	BLACK	RED
3	L2	WHITE	BLACK
4	GND	GREEN	GRN/YEL
5	ALARM FEED	ORANGE	YELLOW
6	ALARM RETURN	BLUE	BLUE

PUMP GND  
 MAN RUN  
 ALARM FEED  
 ALARM RETN  
 MAN RUN  
 ALARM FEED  
 ALARM RETN  
 PUMP GND  
 MAIN LI  
 MAIN LC  
 MAIN N  
 POWER SOURCE  
 DEDICATED 30A CIRCUIT BREAKER REQUIRED