


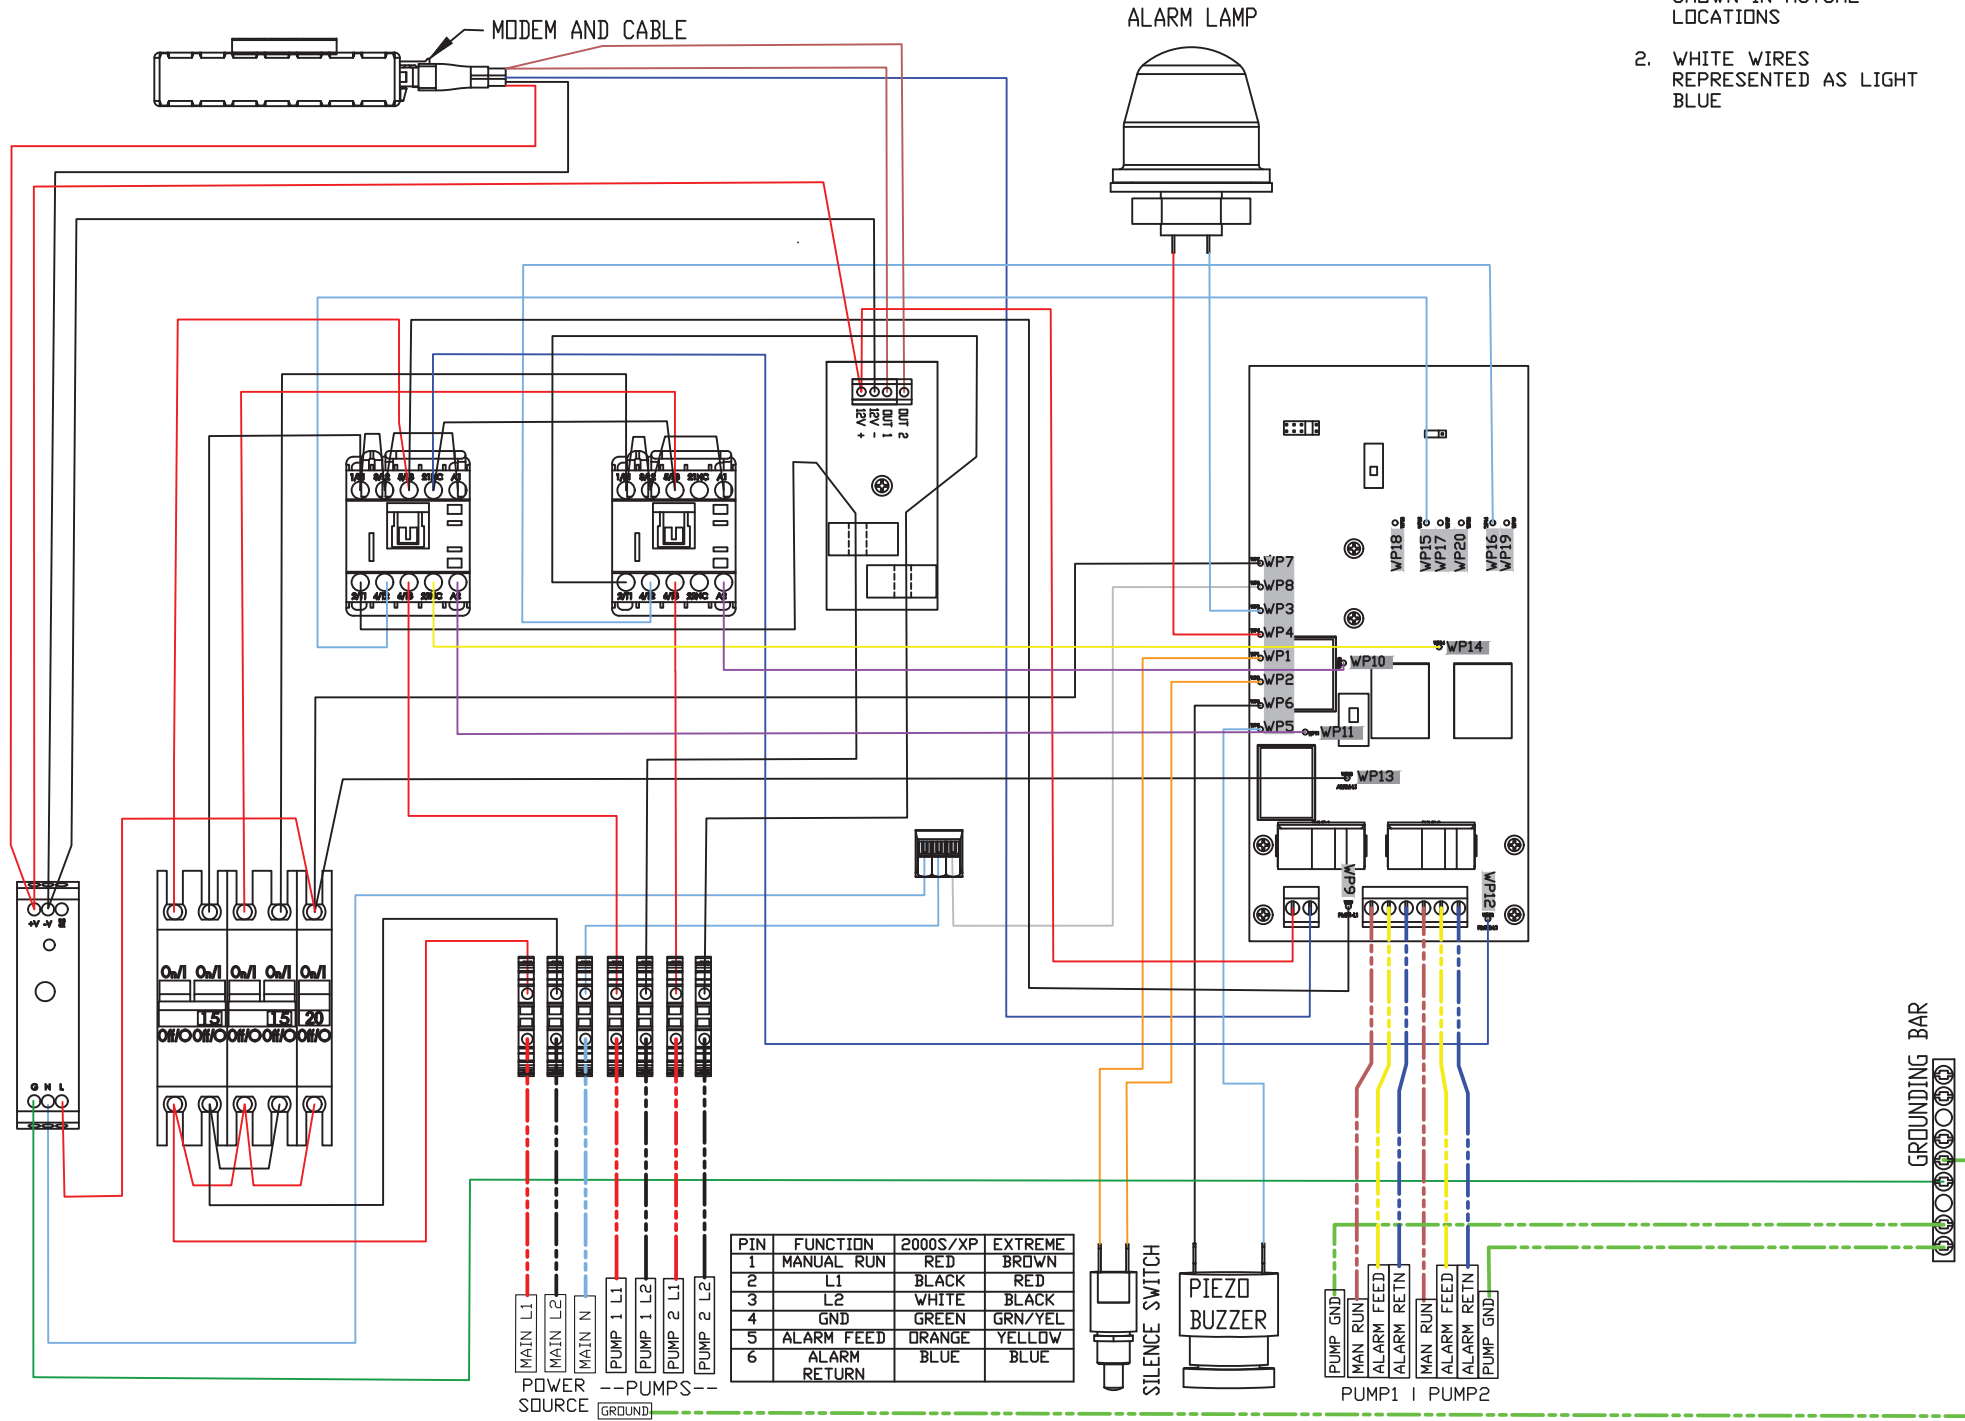

NC0305G01

NOTES:

1. COMPONENTS NOT SHOWN IN ACTUAL LOCATIONS
2. WHITE WIRES REPRESENTED AS LIGHT BLUE



PIN	FUNCTION	2000S/XP	EXTREME
1	MANUAL RUN	RED	BROWN
2	L1	BLACK	RED
3	L2	WHITE	BLACK
4	GND	GREEN	GRN/YEL
5	ALARM FEED	ORANGE	YELLOW
6	ALARM RETURN	BLUE	BLUE

POWER SOURCE -- PUMPS --  
 DEDICATED 30A CIRCUIT BREAKER REQUIRED

PUMP1 | PUMP2  
 PUMP GND-  
 MAN RUN  
 ALARM FEED  
 ALARM RETN  
 MAN RUN  
 ALARM FEED  
 ALARM RETN  
 PUMP GND-

GROUNDING BAR