



LEGEND

- FROM CORE
- - - SUPPLY CABLE
- FACTORY INSTALLED

PIN	FUNCTION	2000S	EXTREME
1	MANUAL RUN	RED	BROWN
2	L1	BLACK	RED
3	L2	WHITE	BLACK
4	GND	GREEN	GRN/YEL
5	ALARM FEED	ORANGE	YELLOW
6	ALARM RETURN	BLUE	BLUE

SERVICE

L1
L2
NEUTRAL
GROUND

A DEDICATED 30A CIRCUIT BREAKER IS REQUIRED

PUMP 1

L2
L1
PUMP POWER
MANUAL RUN
ALARM FEED
ALARM RETURN
GND

PUMP 2

L2
L1
PUMP POWER
MANUAL RUN
ALARM FEED
ALARM RETURN
GND

WARNING

REMOVE VOLTAGE FROM OPEN DRY CONTACT BEFORE SERVICING STATION OR PANEL.
CONNECTION TO LINE VOLTAGE ON DRY CONTACT WILL RESULT IN A SAFETY HAZARD FOR SERVICE PERSONNEL