

NOTES:

- 1. SS CURB STOP/CHECK VALVE AND FITTINGS ARE PROVIDED SEPARATELY, TO BE ASSEMBLED BY OTHERS
- 2. TO ASSEMBLE, APPLY A DOUBLE LAYER OF TEFLON TAPE, AND A LAYER OF PIPE DOPE (SUPPLIED BY OTHERS) TO THE THREADS ON THE PLASTIC FITTINGS AND INSTALL PER THE MANUFACTURER'S INSTRUCTIONS
 - *FOR SS FITTING INTO SS THREAD, USE PIPE DOPE OR TEFLON TAPE, NOT BOTH
- 3. ASSEMBLY IS TO BE PRESSURE TESTED (BY OTHERS)
- 4. ASSEMBLY IS TO BE USED WITH SDR11 HDPE PIPE
- 5. TO ORDER SS LATERAL KIT, USE PART NUMBER NC0193G01
- 6. CURB BOX IS TO BE ORDERED SEPARATELY, SEE ABOVE


KIT PARTS ARE NOT ASSEMBLED

SGS	DN	11/02/11	В	3/16
DR BY	CHK'D	DATE	ISSUE	SCALE



SEWER SYSTEMS

STAINLESS STEEL LATERAL KIT 1-1/4" SDR 11 HDPE PIPE

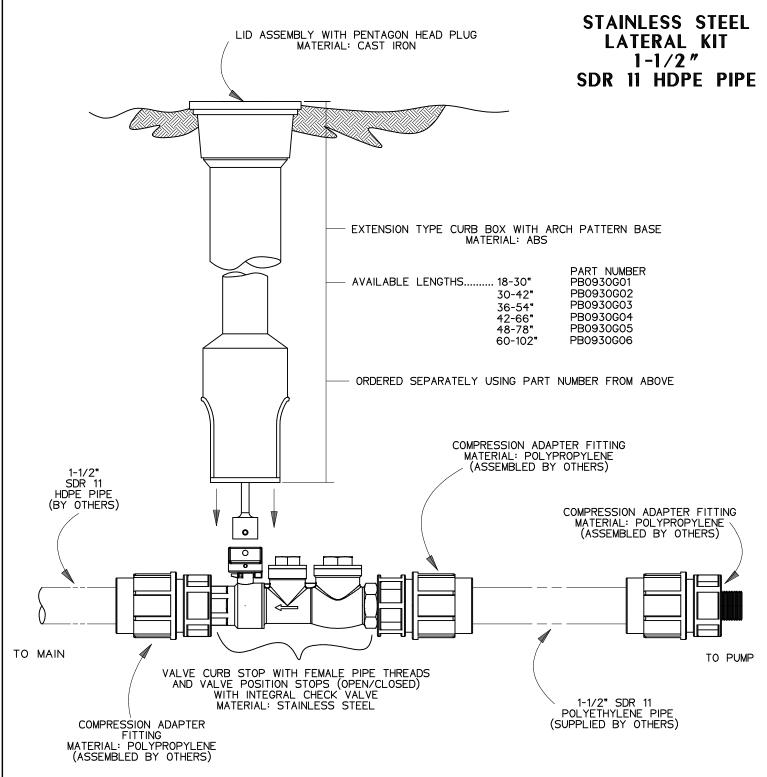

NOTES:

1. SS CURB STOP/CHECK VALVE AND FITTINGS ARE PROVIDED SEPARATELY, TO BE ASSEMBLED BY OTHERS

2. TO ASSEMBLE, APPLY A DOUBLE LAYER OF TEFLON TAPE, AND A LAYER OF PIPE DOPE (SUPPLIED BY OTHERS) TO THE THREADS ON THE PLASTIC FITTINGS AND INSTALL PER THE MANUFACTURER'S INSTRUCTIONS

**FOR SS FITTING INTO SS THREAD, USE EITHER PIPE DOPE OR TEFLON TAPE, NOT BOTH

- 3. ASSEMBLY IS TO BE PRESSURE TESTED (BY OTHERS)
- 4. ASSEMBLY IS TO BE USED WITH SDR11 HDPE PIPE
- 5. TO ORDER SS LATERAL KIT, USE PART NUMBER NC0193G02
- 6. CURB BOX IS TO BE ORDERED SEPARATELY, SEE ABOVE


KIT PARTS ARE NOT ASSEMBLED

SGS	DN	11/02/11	В	3/16
DR BY	CHK'D	DATE	ISSUE	SCALE



SEWER SYSTEMS

STAINLESS STEEL LATERAL KIT 1-1/2" SDR 11 HDPE PIPE

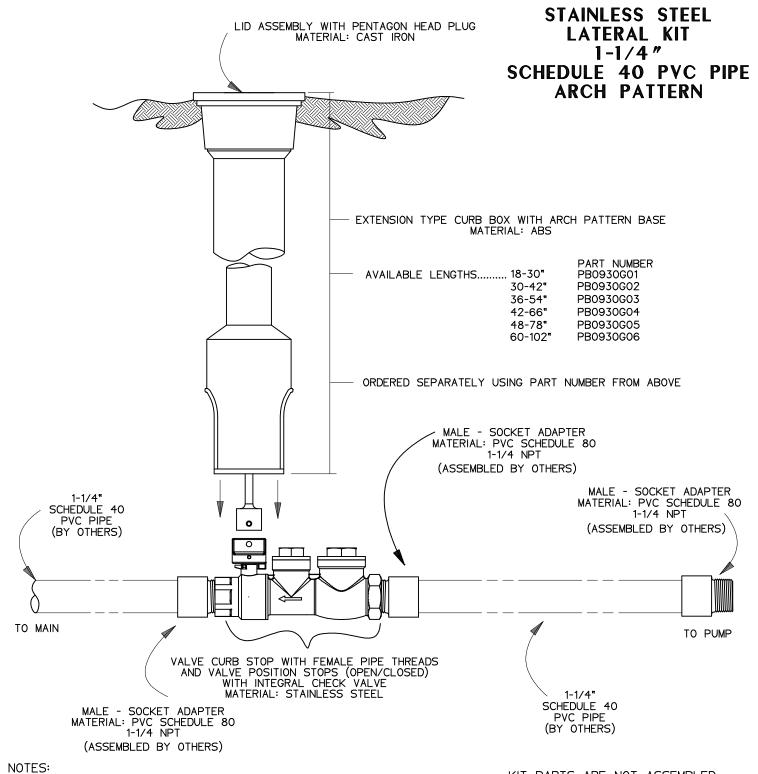

- 1. SS CURB STOP/CHECK VALVE AND FITTINGS ARE PROVIDED SEPARATELY, TO BE ASSEMBLED BY OTHERS
- 2. TO ASSEMBLE, APPLY A DOUBLE LAYER OF TEFLON TAPE, AND A LAYER OF PIPE DOPE (SUPPLIED BY OTHERS) TO THE THREADS ON THE PLASTIC FITTINGS AND INSTALL PER THE MANUFACTURER'S INSTRUCTIONS
 - *FOR SS FITTING INTO SS THREAD, USE EITHER PIPE DOPE OR TEFLON TAPE, NOT BOTH
- 3. ASSEMBLY IS TO BE PRESSURE TESTED (BY OTHERS)
- 4. ASSEMBLY IS TO BE USED WITH SCHEDULE 40 PVC PIPE
- 5. TO ORDER SS LATERAL KIT, USE PART NUMBER NC0193G03
- 6. CURB BOX IS TO BE ORDERED SEPARATELY, SEE ABOVE

KIT PARTS ARE NOT ASSEMBLED


SGS	DN	11/02/11	С	3/16
DR BY	CHK'D	DATE	ISSUE	SCALE



SEWER SYSTEMS

STAINLESS STEEL LATERAL KIT 1-1/4" SCHEDULE 40 PIPE

STAINLESS STEEL LATERAL ASSEMBLY NO FITTINGS

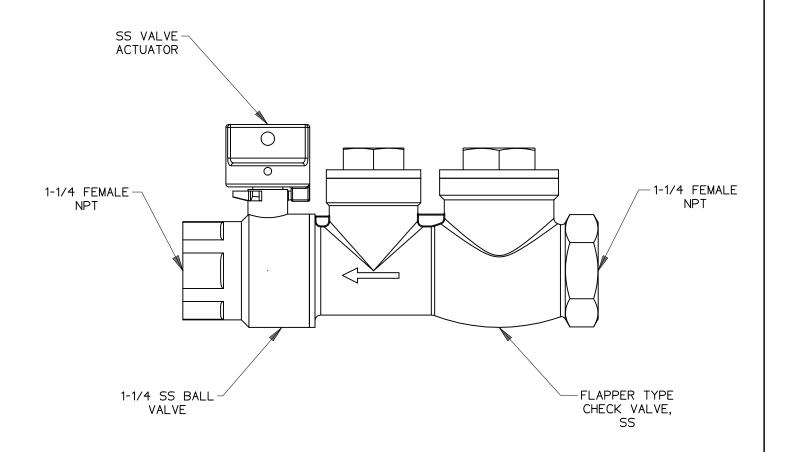

PART IS A BALL VALVE CURB STOP WITH FEMALE PIPE THREADS, VALVE POSITION STOPS (OPEN/CLOSED), AND INTEGRAL CHECK VALVE MATERIAL: STAINLESS STEEL

PRESSURE RATING: 235 PSI

TO ORDER SS LATERAL, NO FITTINGS USE PART NUMBER NB0184P01

NOTES:

- 1. FOR SS FITTING INTO SS THREAD, USE PIPE DOPE OR TEFLON TAPE, NOT BOTH
- 2. FOR PLASTIC FITTINGS INTO SS THREAD, USE BOTH PIPE DOPE AND 2 LAYERS OF TEFLON TAPE

SGS	DN	09/20/11	Α	3/16
DR BY	CHK'D	DATE	ISSUE	SCALE



STAINLESS STEEL LATERAL ASSEMBLY NO FITTINGS