## 240V SENTRY ALARM PANEL

#### Installation Process:

All installations should be documented on apps.eone.com

- 1. Access apps.eone.com from any smart device If you don't have access to a smart device, please contact your local distributor for direction
- 2. Log in or create a login
- 3. Find or create a new site (customer address)
- 4. Complete Installation Checklist See installation manual, shipped with your Grinder Pump Station, for complete instructions

#### Panel Installation Notes:

- The panel is recommended to be installed within sight of the station
- > The panel must be installed where an alarm can be seen and heard
- > The panel is to be mounted to a wall or pole through mounting flanges at top and bottom of panel
- The panel must be mounted with the Alarm Lamp up
- All field penetrations for conduit entries must be through the bottom wall
- > All conduit fittings into the panel must be 4X rated and sealed
- ➤ Seal all conduit using only Duct Seal, per NEC SECTION 300.5 & 300.7 Startup Process:
- ➤ A dedicated 30 Amp breaker is required to feed the E/One Alarm Panel
- ➤ The conductors feeding the Main Source Power must be 10AWG copper or larger, per NEC 310.16
- The panel should be installed 3' to 5' off the ground

### Supply cable Notes:


- ➤ Unprotected supply cable must be buried a minimum of 24" below grade or it must be protected by appropriate conduit, per NEC 300.5
- ➤ If using conduit, be sure to use proper bedding materials
- ➤ Supply Cable Voltage Drop 12 AWG Wire 240 VAC Pump - .098 Volts per foot of cable
- The maximum recommended length of 12 AWG supply cable, assuming supply voltage is within 5% of pump nameplate voltage at panel: 240 VAC = 150' (minimum voltage at pump is 216 VAC)
- Consult your local distributor if longer distances are needed Underground splices are not recommended and may wid warranty

#### Pre-Startup Procedure:

- 1. Inspect the station for burial depth, grading, damage, electrical connections, etc.
- 2. Verify that the panel is wired properly (see the following pages), and is damage-free
- 3. Verify that the conduits are sealed with Duct Seal, and that there are no exposed wires outside the panel
- 4. Verify that the incoming voltage is between 216V and 264V

All startups should be performed and logged on apps.eone.com

- 1. Access apps.eone.com from any smart device
  - If you don't have access to a smart device, contact your local distributor for direction
- 2. Log in or create a login
- 3. Find or create a new site (customer address)
- 4. Complete Startup Checklist

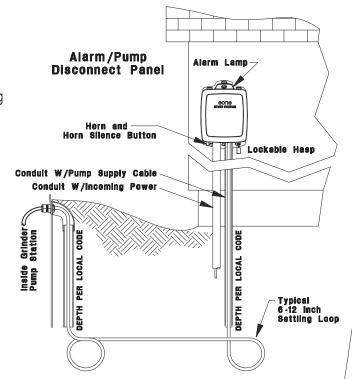

Refer to nameplate for panel part number



ENVIRONMENT ONE 2773 BALLTOWN ROAD NISKAYUNA, NY, USA 12309


WWW.EONE.COM


SERVICELINK Toll Free: 1-866-539-9803

DECAL NO.: PB0951P01 REV G

### optional wiring diagrams


REFER TO FACING PAGE FOR MAIN WIRING

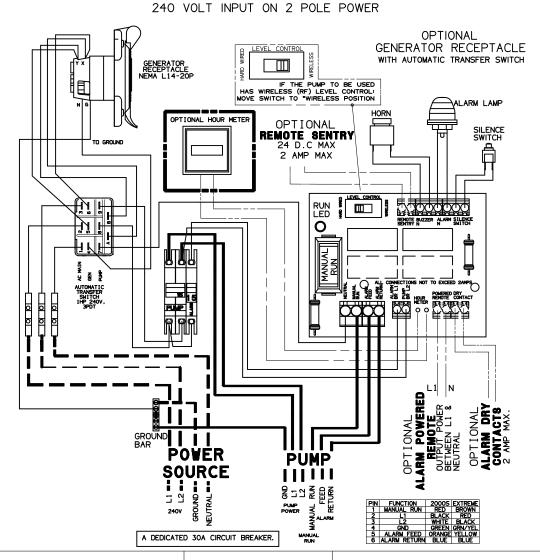


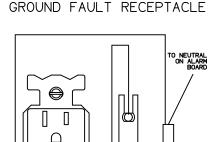


TO GROUND

**OPTIONAL** 

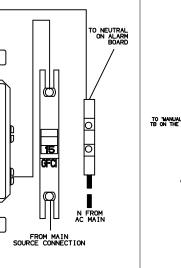

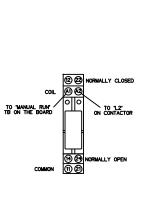

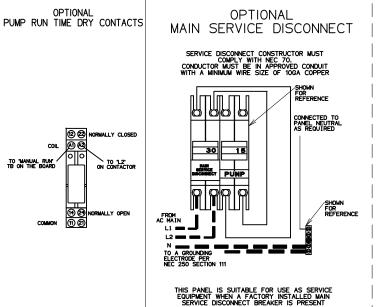

# MAIN WIRING DIAGRAM

REFER TO FACING PAGE FOR OPTIONAL FEATURE WIRING 240V Input on 2 Pole Power

